



## EQUIPMENT

PIONEER DDJ-SB : A1 + B1 + A2 + B2

NUMARK MIXTRACK PLATINUM : REMOVE PADDING

PIONEER DDJ-SB2 : A1 + B1 + C1 + A2 + B2 + C2

RELOOP TERMINAL MIX4 : REMOVE PADDING

PIONEER DDJ-RB : A1 + B1 + C1 + A2 + B2 + C2

RELOOP TERMINAL MIX2 : A1 + B1 + A2 + B2

PIONEER DDJ-SR : REMOVE PADDING

RELOOP BEATPAD : A1 + A2

AKAI MPC RENAISSANCE : REMOVE PADDING

VESTAX VCI-400 : A1 + C1 + A2

AMERICAN AUDIO VMS 4/5 : REMOVE PADDING

STANTON SCS.4DJ : A1 + A3 + B1 + C1 + A2 + A4 + B2 + C2

BEHRINGER CMD-STUDIO : REMOVE PADDING

DENON MC-3000 : A1 + B1 + B3 + C1 + A2 + B2 + B4 + C2

DENON MC-6000 : B1

DENON MC-4000 : REMOVE PADDING

NI KONTROL S5 : REMOVE PADDING

NI KONTROL S4 : REMOVE PADDING

NI KONTROL S4 MK2 : REMOVE PADDING

NI KONTROL S2 MK2 : A1 + B1 + A2 + B2

NOVATION 25SL MK2 : A1 + B1 + C1

NUMARK MIXTRACK PRO : A1 + B1 + C1

NUMARK MIXTRACK PROII : A1 + A2

NUMARK MIXTRACK QUAD : A1 + C1